



## Lok-clip ALUMINIUM INSERT

Note: Requires experience to use. If used for Single Skin, requires a film liner (shown in blue)

1. TILT FORWARD
2. PUSH DOWN AND FORWARD

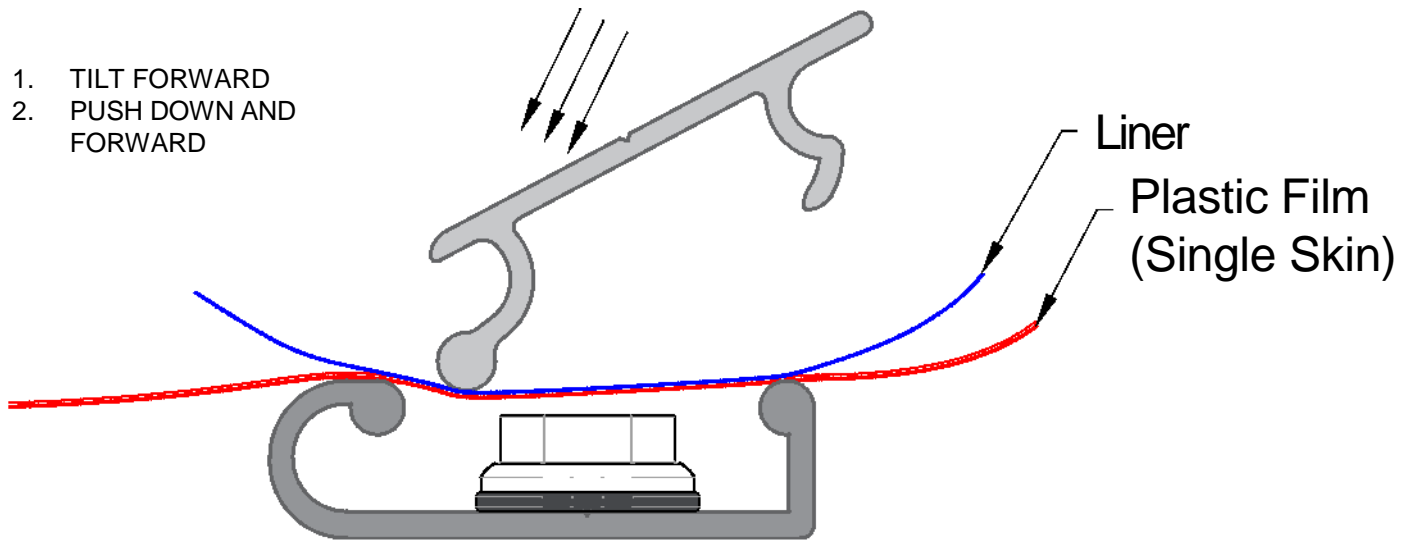

PUSH/SEAT FULLY FORWARD

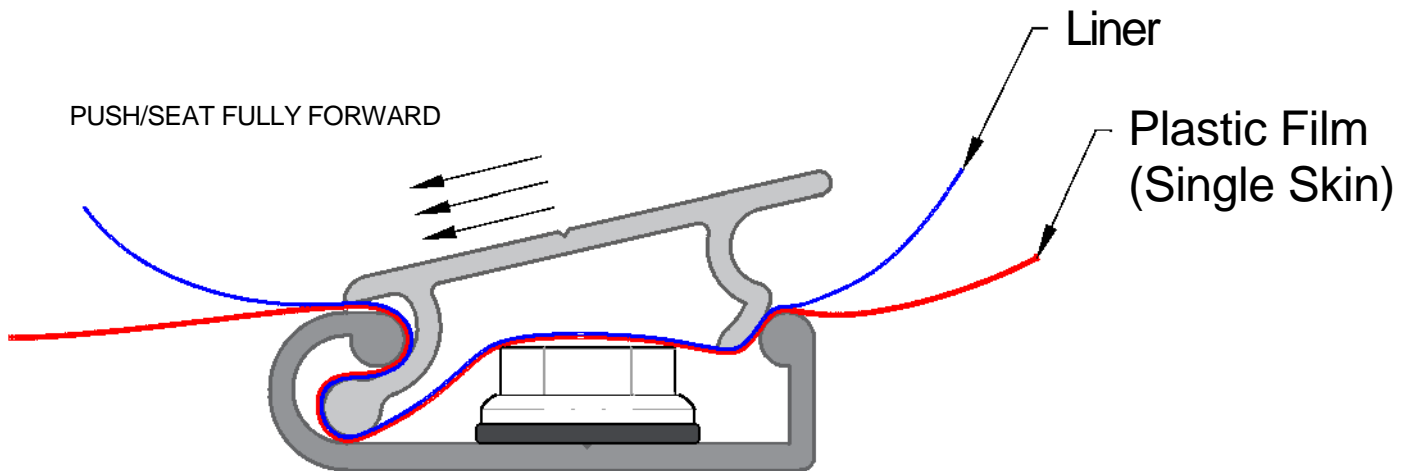

1. DO NOT HAVE ANY TENSION ON TAIL OF FILM BEHIND THE INSERT
2. EASE REAR OF CLIP INTO THE GROOVE, TAKE CARE NOT TO DAMAGE THE FILM

